

Supplies-


YLI Candlelight Yarn	Fabric (outer)	Clover Gold Eye Chenille Needles No. 18
YLI Wonder Invisible Thread (clear)	One 14" x 17"	Scissors
Thread to match fabric	One 8" x 12"	Sewing Machine with Embroidery Unit
DigiBobbE 4: Bubbles & Pearls	Fabric (lining)	Second bobbin case for heavier thread
Firm Tear Away Stabilizer cut to 5 1/2" x 8 1/2"	One 8" x 12"	
Pellon Décor Bond 10" x 12"	Clover White Marking Pen	

Instructions


Embroider Design

Refer to *DigiBobbE General Directions Page* for more information.

- 1 Wind a bobbin with YLI Candlelight Yarn. Load the bobbin into the bobbin case used for heavier threads. Adjust the bobbin case so the tension allows the YLI Candlelight Yarn to pull smoothly but with a little resistance.
- 2 Mount the 14" x 17" fabric with the area to be embroidered at the far left of the fabric. The fabric is inserted in the hoop with the fabric right side down (the opposite of how you would usually hoop it.)

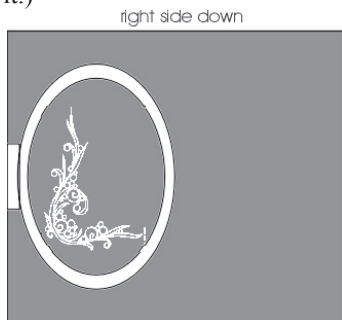


- 3 Put the YLI Wonder Invisible Thread in the top of the sewing machine with the YLI Candlelight Yarn in the bobbin.
- 4 Turn off the automatic thread cutter for embroidery.
- 5 Attach hoop to embroidery machine. Lay 5 1/2" x 8 1/2" stabilizer into hoop area. Hold the top thread and pull the bobbin thread to the top before starting to embroider
- 6 Embroider the design. Tear away the stabilizer. Use a large eyed needle to thread the tail of the YLI Candlelight Yarn to the back of the fabric.
- 7 Trim the fabric to measure 10" x 12" with the stitched design at the left (with the right side DOWN). Keep in mind that 1/2" on the outer edge is seam allowance.

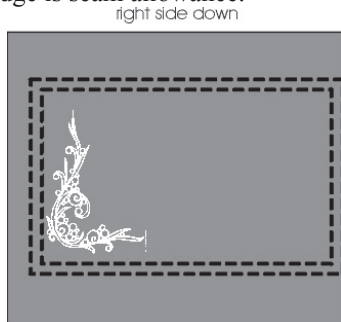


- 8 Iron 10" x 12" Decor Bond to back of cover fabric.

Assemble Cover


- 1 Change the bobbin to match the fabric and switch back to the normal bobbin case. Put a straight stitch sewing machine foot on the sewing machine.
- 2 Turn under 1/2" along a long edge of the liner fabric and top stitch. right sides together

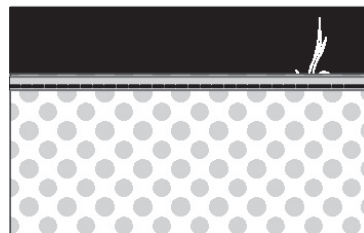

- 3 With the stitched design right side up and the design on the right, place the liner fabric right sides together with the side and bottom edges aligned.
- 4 Place the 8" x 12" outer fabric right sides together with the other outer fabric - the liner fabric will be trapped between the layers. Match the top and side edges of the outer fabrics.

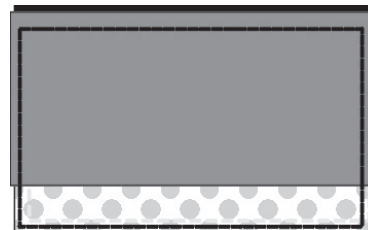

- 5 Stitch 1/2" around the outer edge. Turn right sides out so the liner fabric forms a pocket for the pad. Press.
- 6 Mark 2 lines as shown - 5 1/4" from the outer edge of the fabric- using Clover White Marking Pen.
- 7 Stitch along the two lines.

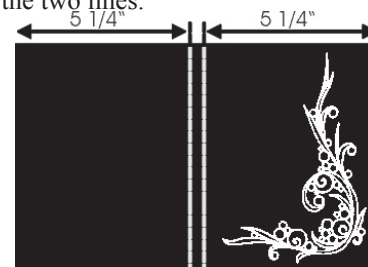

- 8 Slide cardboard back of pad into the liner pocket.

